
Phone: 218-739-4641 Fax: 218-739-4008 www.shoremaster.com

SLIDE OFF-DECK:

Instructions and Safety Tips




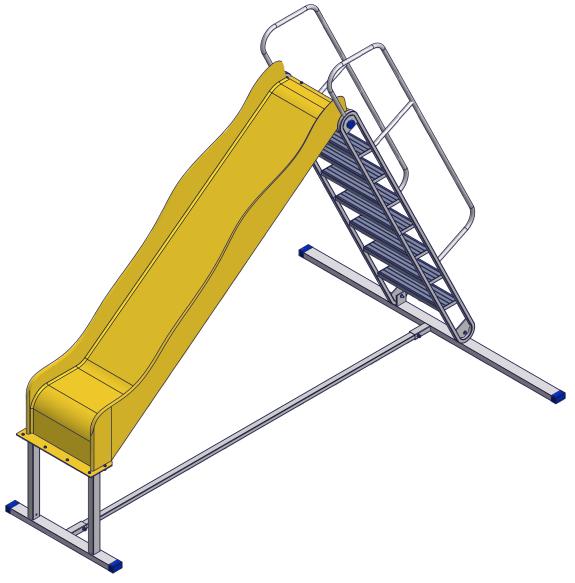

## **CAUTION - PUT SAFETY FIRST**


- 1. Before attempting to install or use this slide, study and fully understand the proper operating procedures and safety precautions outlined in this owner's manual.
- 2.NOT COMPLYING WITH THE PROCEDURES AND PRECAUTIONS OUTLINED IN THIS MANUAL WILL INVALIDATE THE WARRANTY AND MAY RESULT IN PERSONAL INJURY OR DEATH.
- 3. If you have any questions about assembly, installation, use or suitability of this product, contact an authorized dealer or ShoreMaster directly at 1-800-328-8945.

## SLIDE - OFF DECK

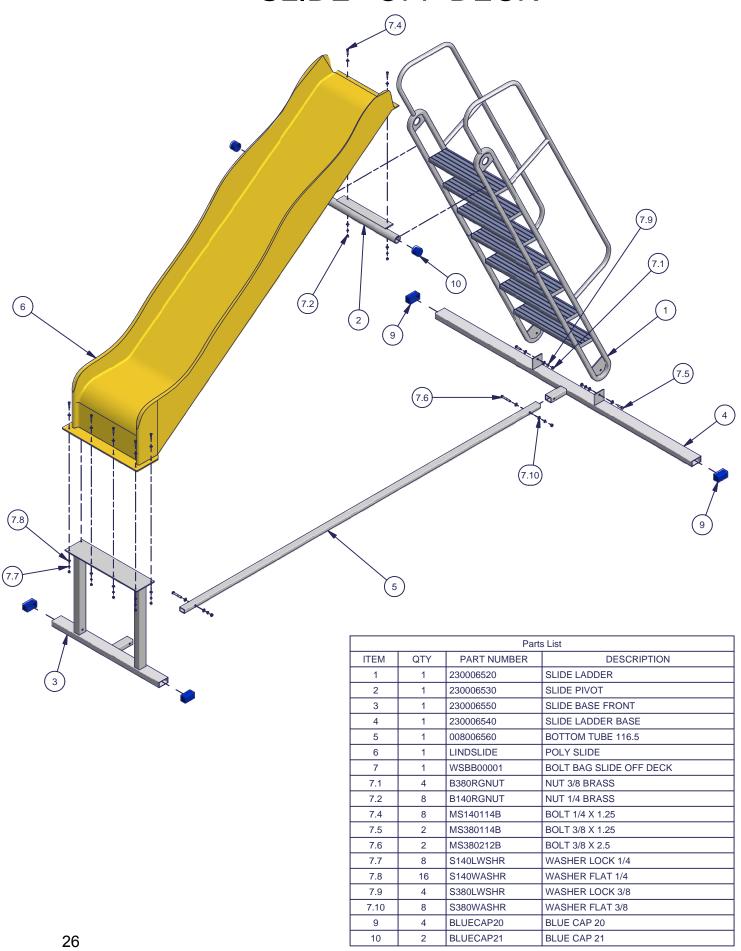


## STEP 1

Slide one Blue Cap 20 on each side of the Ladder Base as shown.

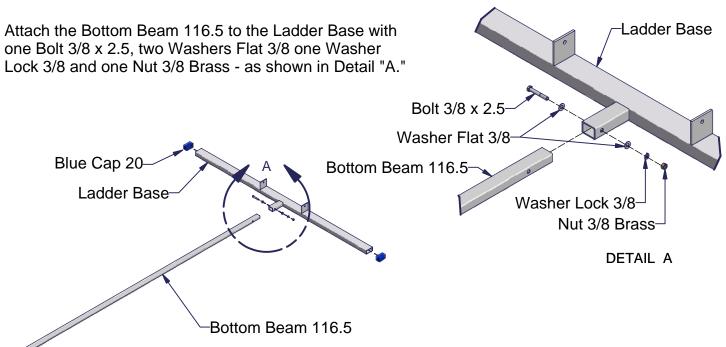

## STEP 2



Attach the Poly Slide to the Slide Base Front with six Bolts 1/4 x 1.25, twelve Washers Flat 1/4, six Washers Lock 1/4, and six Nuts 1/4 Brass - as shown in Detail "A."

Bolt 1/4 x 1.25

Washer Flat 1/4 x 1.25

Washer Lock 1/4

Nut 1/4 Brass

Slide Base Front

Blue Cap 20

3

